




Montanari Group
GEARLESS & GEARBOX
TRACTION MACHINES



INSTALLATION, USE AND MAINTENANCE
GEARLESS

MGV34RANGE

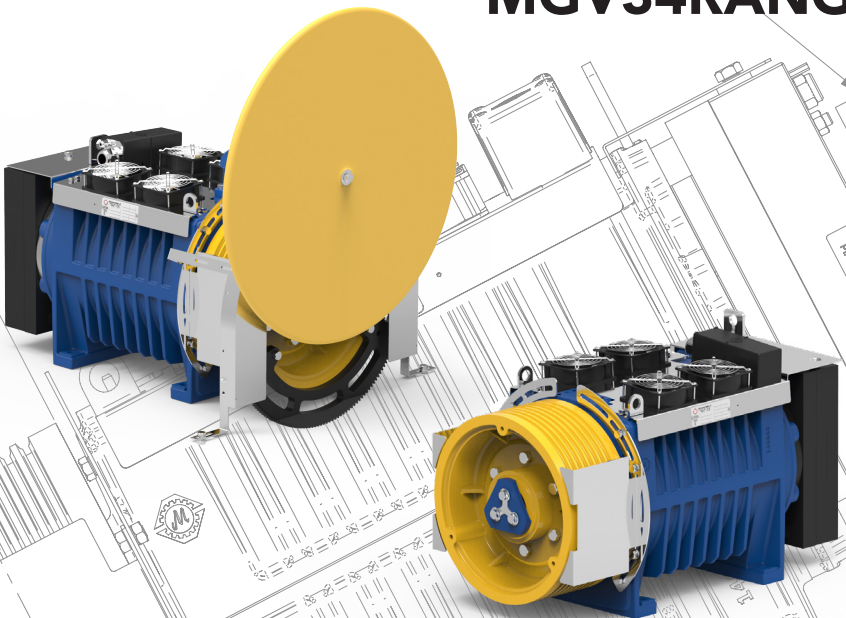



Thank you for choosing a Montanari product.

Since 1970, Montanari Group has been focused on providing its customers with the best traction machines and components for lifts and escalators.

We are proud to have you as a customer and user of the Montanari traction machines, and we are confident that we can work together for a long time.








Thanks again for your choice.

Massimo Montanari
CEO of Montanari Group



REV.	DATE	DESCRIPTION	EDITED BY	VERIFIED BY	APPROVED BY
1	16/04/2019	First Redaction	Marketing Dept	Technical Dept Alberto Mantovani	STEFANO BERTONI (DTE)
2	04/06/2019	Update	Marketing Dept	Technical Dept Alberto Mantovani	STEFANO BERTONI (DTE)
3	06/06/2019	Update	Marketing Dept	Technical Dept Alberto Mantovani	STEFANO BERTONI (DTE)
4	02/08/2019	Update	Marketing Dept	Technical Dept Alberto Mantovani	STEFANO BERTONI (DTE)
5	12/03/2020	Update	Marketing Dept	Technical Dept Alberto Mantovani	STEFANO BERTONI (DTE)
6	22/03/2020	Update	Marketing Dept	Technical Dept Alberto Mantovani	STEFANO BERTONI (DTE)
7	26/03/2020	Update	Marketing Dept	Technical Dept Alberto Mantovani	STEFANO BERTONI (DTE)

WARNING SYMBOLS USED IN THE MANUAL:

	It indicates that safety measures must be taken to avoid electric shock.
	It indicates that safety measures must be taken to prevent personal injury.
	It indicates that safety measures must be taken to prevent damage to components.
	It indicates that safety measures must be taken to prevent burns due to contact with hot/ overheated surface.
	It indicates useful information before and during the installation step.
	It refers to specific parts of the manual.
	It refers to the proper product disposal.

CONTENTS

1.	GENERAL INFORMATION	7
1.1	Introduction.....	7
1.2	Copyright	7
2.	SAFETY.....	8
2.1	Intended use	8
2.2	User's obligations	8
2.3	Correct disposal	9
2.4	Specific hazards.....	9
2.5	Legal References	9
3.	IDENTIFICATION AND DATA	9
3.1	Identification plate	9
3.2	Dimensions.....	12
3.3	Sound pressure.....	15
4.	TRANSPORT AND STORAGE	15
4.1	Handling.....	15
4.2	Storage.....	16
5.	DESCRIPTION	17
5.1	General description.....	17
5.2	Main components	17
5.3	Brake	19
6.	INSTALLATION.....	20
6.1	General installation information	20
6.2	Installation surface.....	20
6.3	Installation procedure.....	20
6.4	Electrical installation - Connections	22
7.	CONNECTION OF THE BRAKE FOR RESCUE SYSTEM.....	24
7.1	Connection of the cable to the brake levers.....	24
7.2	Connection of the cable to the hand release lever.....	25
7.3	Rescue System	26
7.4	Manual rescue system	26
7.5	Procedure:	26



8.	OPERATION	28
8.1	Connections	28
8.2	Additional components.....	28
8.3	General operation information.....	28
9.	TROUBLESHOOTING, MAINTENANCE AND REPAIR	28
9.1	General information	28
9.2	Traction/return sheave.....	29
9.3	Replacement of components	29
9.4	Problems, causes and solutions	29
9.5	Maintenance and repair	30
9.5.1	General indications	30
9.5.2	Description of maintenance activities.....	30
10.	SPARE PARTS	31
10.1	General information	31
10.2	How to order spare parts	31
11.	BRAKE CERTIFICATE	31
11.1	Exam certificate EU-BD 766	32
11.2	Exam certificate EU-BD 1014/1.....	33
12.	COMPLIANCE DECLARATION	34

1. GENERAL INFORMATION

1.1 Introduction

These operating instructions must always be available for consultation. No liability is accepted for any malfunction due to installation not conforming to specifications, except in cases approved by Montanari Giulio & C.

All persons involved in the installation, operation, maintenance and repair of the unit must have read and understood the instructions.

No liability is accepted for damage, breakage or accident caused by failure to follow the instructions.

To make technical improvements, Montanari reserves the right, if deemed necessary, to modify the units and accessories, preserving their essential characteristics and improving efficiency and safety, without notice.

1.2 Copyright

All rights to these operating instructions belong to Montanari Giulio & C. S.r.l. The information in this manual may not be reproduced or used in an unauthorized manner or made available to third parties without prior approval.

If you have any questions, please contact:

MONTANARI GROUP
HEADQUARTER - MONTANARI GIULIO & C. Srl
Via Bulgaria 39 - 41122 - Modena - Italia
Tel: +39 059 453611 - Fax: +39 059 315890
www.montanarigiulio.com
info@montanarigiulio.com



2. SAFETY

2.1 Intended use

The MGV34 gearless machine is supplied ready for safe and reliable use. Any modification by the user that may affect safety or reliability is prohibited; it is also prohibited to tamper with devices or functions designed to prevent accidental contact.

It can be used in systems with and without machine room (MR - MRL).



The Montanari MGV34 gearless machine must be used and operated in strict compliance with the conditions set out in the supply contract.

Technical specifications considered: speed, cab capacity, cab weight, presence or absence of compensation, roping at the time of order.

No liability is accepted for any malfunction due to installation not conforming to specifications, except in cases approved by Montanari Giulio & C..

2.2 User's obligations

The operator must ensure that all persons involved in installation, operation, maintenance and repair have read and understood the supplied operating instructions and have adapted to them in order to:

- Avoid damage to property or persons.
- Ensure safe and reliable operation of the unit.
- Avoid breakage and environmental damage due to misuse.

In particular:

- Always observe the relevant environmental and safety regulations when transporting, assembling, installing, operating, maintaining and dismantling the unit.
 - The unit must only be used, maintained and repaired by authorized, properly trained and qualified personnel.
 - The gearbox must not be cleaned using high-pressure cleaning equipment.
 - All work must be carried out with care and with due attention to safety.
 - Any work on the unit should only be carried out when it is not in operation.
 - A warning must be placed on the main switch to clearly indicate that work is in progress on the unit.
 - No welding must be carried out on the unit.
 - Do not use the unit as a grounding point for welding operations.
 - If any changes are detected (e.g. overheating or unusual noise) during operation, switch off immediately.
 - Rotating components must be equipped with appropriate guards to prevent contact.
 - If the unit is intended for installation in plant or machinery, the manufacturer of such plant or machinery must ensure that the standards, indications and descriptions contained in these operating instructions are incorporated into its own instructions.

- The information on the warning or identification plates must be complied with. These plates must be kept clean and legible at all times. Missing plates must be replaced.
- All spare parts can be obtained from Montanari Group.

2.3 Correct disposal



Respect the environment and dispose of the product according to the regulations in force in the country of installation.

2.4 Specific hazards

Depending on the conditions of use, the surface of the unit can become very hot.



Danger of burning!

2.5 Legal References

Tab. 1

N	Norm	Description
1	UNI 10147	Maintenance: Terminology.
2	EN 81-20	Safety rules for the construction and installation of lifts - Lifts for the transport of persons and goods.
3	EN 81-50	Safety rules for the construction and installation of lifts - Examinations and tests.
4	EN 81-21	Safety rules for the construction and installation of lifts - Lifts for the transport of persons and goods - Part 21: New passenger and goods passenger lifts in existing building.

3. IDENTIFICATION AND DATA

3.1 Identification plate

The data on the plate are:

Fig. 1

The identification plate contains the following information:

- Manufacturer:** Montanari Giulio & C. (with logo)
- Manufacturer's address:** Via Bulgaria, 39, 41122 Modena - ITALY
- QR code:** QR code to access the relevant documentation.
- Speed:** 96 - 53 RPM
- Rated torque:** 670 Nm
- Serial number:** 022611
- Frequency:** 25,6 - 14,1 Hz
- Rated current:** 15 A
- Cycle type:** S5 180S/H 40% ED
- Weight:** 330 Kg
- Power rating:** 6,7 - 3,7 kW
- Motor pole no.:** 32 Poles
- Rated voltage:** 380 - 208 V_I
- Year of production:** 2019
- Model:** MGX80
- Gearless machine code:** MGX800809638E00
- Other markings:** MADE IN ITALY, CE, CODICE GEARLESS GEARLESS CODE



GEARLESS MACHINE TECHNICAL CHARACTERISTICS: MG V34S - MG V34M - MG V34ML - MG V34L

Tab. 2

MGV34S	Type	Pn	Speed	Vn	Cn	In	Cmax	Imax	EMF	Poles	F	Rs	Ls	Static Load	I	Duty Cycle	Weight
Code machine		kW	[RPM]	[V]	[Nm]	[A]	[Nm]	[A]	[V·s/rad]	[N°]	[Hz]	[Ω]	[mH]	[Kg]	[kg·m ²]		[Kg]
MGV34151203CJ00	MGV34S	4,3	48	210	850	28	1400	50	17	16	6,4	1	15,8	5000	1,35	180S/H 40%	472
MGV34151203CJ00	MGV34S	8,5	96	210	850	43	1400	73	11	16	12,8	0,46	7,3	5000	1,35	180S/H 40%	472
MGV34153003CJ00	MGV34S	14,2	160	210	850	58	1400	102	8	16	21,3	0,25	4	5000	1,35	180S/H 40%	472
MGV34152392CJ00	MGV34S	22,5	239	210	850	81	1400	140	6	16	31,9	0,13	2	5000	1,35	180S/H 40%	472
MGV34150603CJ00	MGV34S	5,3	60	360	850	17,5	1400	32	27	16	8	2,5	39	5000	1,35	180S/H 40%	472
MGV34150963CJ00	MGV34S	8,5	96	360	850	24	1400	43	20	16	12,8	1,4	22	5000	1,35	180S/H 40%	472
MGV34151203CJ00	MGV34S	10,7	120	360	850	28	1400	50	17	16	16	1	15,8	5000	1,35	180S/H 40%	472
MGV34151203CJ00	MGV34S	18,7	210	360	850	43	1400	73	11	16	28	0,46	7,3	5000	1,35	180S/H 40%	472
MGV34153003CJ00	MGV34S	26,7	300	360	850	58	1400	102	8	16	40	0,25	4	5000	1,35	180S/H 40%	472

Tab. 3

MGV34M	Type	Pn	Speed	Vn	Cn	In	Cmax	Imax	EMF	Poles	F	Rs	Ls	Static Load	I	Duty Cycle	Weight
Code machine		kW	[RPM]	[V]	[Nm]	[A]	[Nm]	[A]	[V·s/rad]	[N°]	[Hz]	[Ω]	[mH]	[Kg]	[kg·m ²]		[Kg]
MGV34201803CO13	MGV34M	8,8	80	210	1050	43	1850	81	13	16	10,7	0,44	7,5	6500	2,4	180S/H 40%	566
MGV34202393CO13	MGV34M	13,2	120	210	1050	57	1850	105	10	16	16	0,275	4,4	6500	2,4	180S/H 40%	566
MGV34203803CO13	MGV34M	19,8	180	210	1050	85	1850	150	7	16	24	0,125	2,1	6500	2,4	180S/H 40%	566
MGV34202402CO13	MGV34M	26,4	240	210	1050	107	1850	204	5	16	32	0,08	1,3	6500	2,4	180S/H 40%	566
MGV34200483CO13	MGV34M	5,3	48	360	1050	18,5	1850	34	32	16	6,4	2,5	42	6500	2,4	180S/H 40%	566
MGV34200753CO13	MGV34M	8,3	75	360	1050	21	1850	43	26	16	10	1,6	26,5	6500	2,4	180S/H 40%	566
MGV34201203CO13	MGV34M	13,2	120	360	1050	30,5	1850	57	19	16	16	0,88	15	6500	2,4	180S/H 40%	566
MGV34201803CO13	MGV34M	19,8	180	360	1050	43	1850	81	13	16	24	0,44	7,5	6500	2,4	180S/H 40%	566
MGV34202393CO13	MGV34M	26,3	239	360	1050	57	1850	105	10	16	31,9	0,275	4,4	6500	2,4	180S/H 40%	566
MGV34203003CO13	MGV34M	33	300	360	1050	69	1850	120	8	16	40	0,19	3,2	6500	2,4	180S/H 40%	566
MGV34203803CO13	MGV34M	41,8	380	360	1050	85	1850	150	7	16	50,7	0,125	2,1	6500	2,4	180S/H 40%	566

Tab. 4

MGV34ML	Type	Pn	Speed	Vn	Cn	In	Cmax	Imax	EMF	Poles	F	Rs	Ls	Static Load	I	Duty Cycle	Weight
Code machine		kW	[RPM]	[V]	[Nm]	[A]	[Nm]	[A]	[V·s/rad]	[N°]	[Hz]	[Ω]	[mH]	[Kg]	[kg·m ²]		[Kg]
MGV34311203CO11	MGV34ML	7,03	48	210	1400	40	2400	70	19	16	6,4	0,54	10	6500	2,7	180S/H 40%	623
MGV34311913CO11	MGV34ML	14,1	96	210	1400	58	2400	104	13	16	12,8	0,25	4,6	6500	2,7	180S/H 40%	623
MGV34312393CO11	MGV34ML	17,6	120	210	1400	72	2400	127	11	16	16	0,17	3	6500	2,7	180S/H 40%	623
MGV34313303CO11	MGV34ML	23,5	160	210	1400	96	2400	168	8	16	21,3	0,1	1,9	6500	2,7	180S/H 40%	623
MGV34312402CO11	MGV34ML	35,2	240	210	1400	136	2400	231	6	16	32	0,054	0,96	6500	2,7	180S/H 40%	623
MGV34310603CO11	MGV34ML	8,8	60	360	1400	36	2400	42	32	16	8	1,56	28	6500	2,7	180S/H 40%	623
MGV34310963CO11	MGV34ML	14,1	96	360	1400	36	2400	41	21	16	12,8	0,69	12	6500	2,7	180S/H 40%	623
MGV34311203CO11	MGV34ML	17,6	120	360	1400	40	2400	70	19	16	16	0,54	10	6500	2,7	180S/H 40%	623
MGV34311913CO11	MGV34ML	28,1	192	360	1400	58	2400	104	13	16	25,6	0,25	4,6	6500	2,7	180S/H 40%	623
MGV34312393CO11	MGV34ML	35	239	360	1400	72	2400	127	11	16	31,9	0,17	3	6500	2,7	180S/H 40%	623
MGV34313303CO11	MGV34ML	48,4	330	360	1400	96	2400	168	8	16	44	0,1	1,9	6500	2,7	180S/H 40%	623

Tab. 5

MGV34L	Type	Pn	Speed	Vn	Cn	In	Cmax	Imax	EMF	Poles	F	Rs	Ls	Static Load	I	Duty Cycle	Weight
Code machine		kW	[RPM]	[V]	[Nm]	[A]	[Nm]	[A]	[V·s/rad]	[N°]	[Hz]	[Ω]	[mH]	[Kg]	[kg·m ²]		[Kg]
MGV343112036Q12	MGV34L	8,1	48	210	1620	47	2800	86	19	16	6,4	0,54	10	6500	2,7	180S/H 40%	677
MGV343119136Q12	MGV34L	14,4	85	210	1620	68	2800	124	13	16	11,3	0,25	4,6	6500	2,7	180S/H 40%	677
MGV343123936Q12	MGV34L	20,3	120	210	1620	85	2800	152	11	16	16	0,17	3	6500	2,7	180S/H 40%	677
MGV343130036Q12	MGV34L	27,1	160	210	1620	113	2800	196	8	16	21,3	0,1	1,9	6500	2,7	180S/H 40%	677
MGV343123026Q12	MGV34L	39	230	210	1620	157	2800	273	6	16	30,7	0,054	0,96	6500	2,7	180S/H 40%	677
MGV343104836Q12	MGV34L	8,1	48	360	1620	27,5	2800	51	31	16	6,4	1,56	28	6500	2,7	180S/H 40%	677
MGV343109636Q12	MGV34L	16,3	96	360	1620	42	2800	77	21	16	12,8	0,69	12	6500	2,7	180S/H 40%	677
MGV343112036Q12	MGV34L	20,3	120	360	1620	47	2800	86	19	16	16	0,54	10	6500	2,7	180S/H 40%	677
MGV343119136Q12	MGV34L	32,6	192	360	1620	68	2800	124	13	16	25,6	0,25	4,6	6500	2,7	180S/H 40%	677
MGV343123936Q12	MGV34L	40,5	239	360	1620	85	2800	152	11	16	31,9	0,17	3	6500	2,7	180S/H 40%	677
MGV343130036Q12	MGV34L	50,8	300	360	1620	113	2800	196	8	16	40	0,1	1,9	6500	2,7	180S/H 40%	677


Tab. 6

BRAKE CHARACTERISTICS						
Model	Brake model	Power (Pn)	Voltage (Vn)	Current (In)	Force (Cn)	Certificate
		[W]	[V]	[A]	[Nm]	
MGV34S	RTW800	2 x 502 - 2 x 127	207V _{DC PEAK} - 104V _{DC HOLD}	2.4 - 1.2	2 x 950	EU-BD 1014
MGV34M	RTW1000	2 x 158	207V _{DC}	2 x 0,76	2 x 1200	EU-BD 1014
MGV34ML	RTW1000	2 x 158	207V _{DC}	2 x 0,76	2 x 1200	EU-BD 1014
MGV34L	RSR1500	2 x 165	207V _{DC}	2 x 0,80	2 x 1700	EU-BD 766

3.2 Dimensions

The technical drawing and the overall dimensions follow.

Tab. 7

MGV34S - Fig. 2					
Pulley		Ropes			Dimensions
ØD	F	Ø	min max	Pitch	A
mm	mm	mm	n°	mm	mm
240	130	6,5	6 - 10	12	167
320	180	8	3 - 10	17	153
400		10			
480		12	3 - 9	20	
520	145	13	3 - 7		

Tab. 8

MGV34M - Fig. 3					
Pulley		Ropes			Dimensions
ØD	F	Ø	min max	Pitch	A
mm	mm	mm	n°	mm	mm
240	130	6,5	6 - 10	12	167
320	180	8	3 - 10	17	153
400		10			
480		12	3 - 9	20	
520	145	13	3 - 7		

Tab. 9

MGV34ML - Fig. 3					
Pulley		Ropes			Dimensions
ØD	F	Ø	min max	Pitch	A
mm	mm	mm	n°	mm	mm
320	180	8	3 - 10	17	153
400		10			
480		12	3 - 9		
520	145	13	3 - 7	20	

Tab. 10

MGV34L - Fig. 4					
Pulley		Ropes			Dimensions
ØD	F	Ø	min max	Pitch	A
mm	mm	mm	n°	mm	mm
320	180	8	3 - 10	17	153
400		10			
480		12	3 - 9		
520	145	13	3 - 7	20	


Fig. 2
MGV34S




Fig. 3
MGV34M - ML







Fig. 4
MGV34L

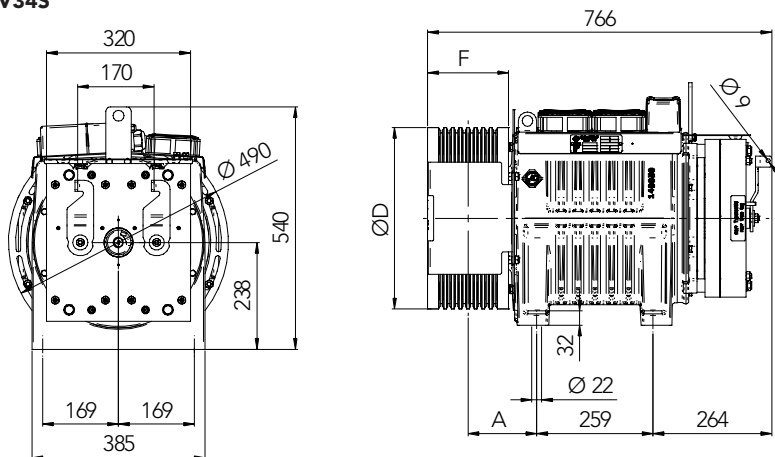

3.3 Sound pressure

Tab. 11

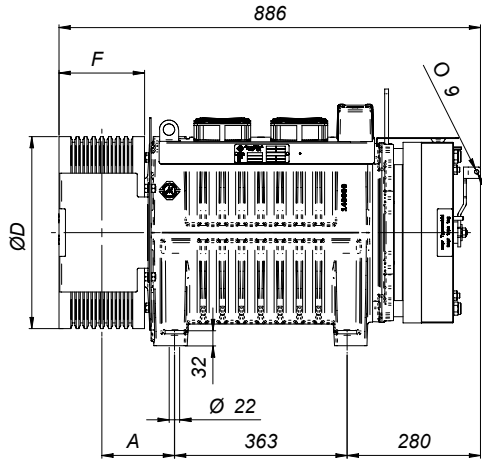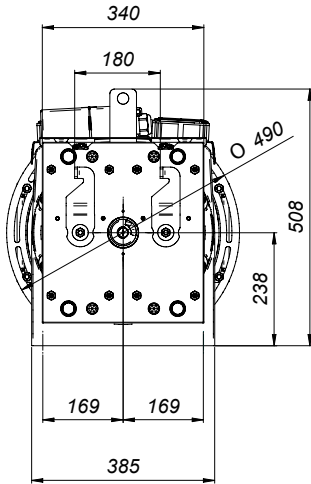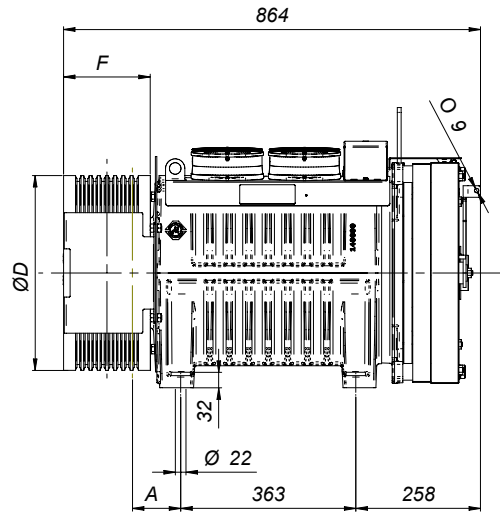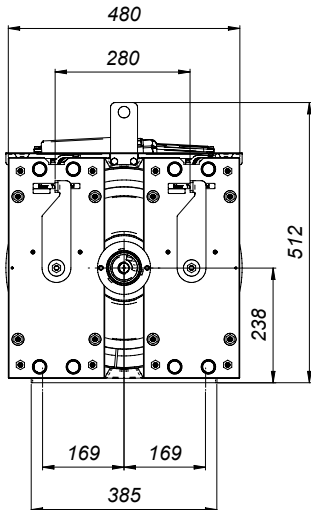MGV 34 RANGE / Sound pressure in dB(A)*		
Version	When operating	With brake
S	≤48	≤54
M		
ML		
L		



Only use lifting systems and equipment with adequate lifting capacity for handling. The entire packaging is designed to allow movement with forklift and forklift truck.

4. TRANSPORT AND STORAGE

4.1 Handling

All gearless machines are packed in crates or cages.

Different types of packaging can be used, depending on the size and means of transport. Unless otherwise specified, the packaging complies with the HPE guidelines.

In some cases, the machines are mounted on wooden pallets to enable them to be transported correctly on trucks. The packaging may not be stacked in any way. It is recommended to check the conditions of the material when it is received. In case of damage, do not proceed with the installation unless expressly authorized by Montanari Giulio & C. Observe the symbols on the packaging to prevent damage to property or personal injury. Here are the meanings of the symbols that may appear on the packaging.



Keep dry



Handle with care



Attachment point



Upper side



Do not use hooks



Keep away from heat sources



Fragile




Center of gravity



For lifting, anchor points (eyebolts) are provided as shown in Fig. 5.
Use only the specified eyebolts to handle the unit.

Fig. 5

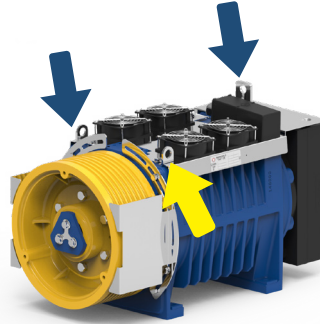

4.2 Storage

The gearless machine must be stored in the position of use on a wooden base not subject to vibrations, in a covered and sheltered place.



If the unit is stored outdoors, it should be covered, taking care that no moisture and/or other foreign matter can accumulate on it.



Supplies for special environmental conditions during transport (e.g. by ship) and storage (climate, temperature, etc.) must be contractually agreed.



- Check the correct operation of the motor and brake after installation.
- Repairs may only be carried out by the manufacturer or by authorised personnel.
- The machine can be red-hot.
- These machines must be connected to inverters.
- When the machine is rotating, both manually and mechanically, it can act as a generator and produce high voltage.
- During configuration, the machine is powered by high voltage.


5. DESCRIPTION

5.1 General description

The MGV34 series gearless machines are permanent magnet motors with double brake system.

5.2 Main components


The unit consists of the main groups as shown in Fig. 6 - 7 - 8. For the versions with 400 - 480 - 520 mm sheave, it is possible to install the kit for the manual rescue system.

MGV34 S - M - ML - L are equipped with a PTC thermal probe inside the windings to protect against overheating (winding temperature up to 130°C) and with a thermo-contact for the activation of the fans. Refer to the electrical connections for more details. -  See Par. 6.4.

Lubrication




The gearless machine contains no oil and it is supplied with bearings already lubricated throughout the life of the machine; no further lubrication is required.

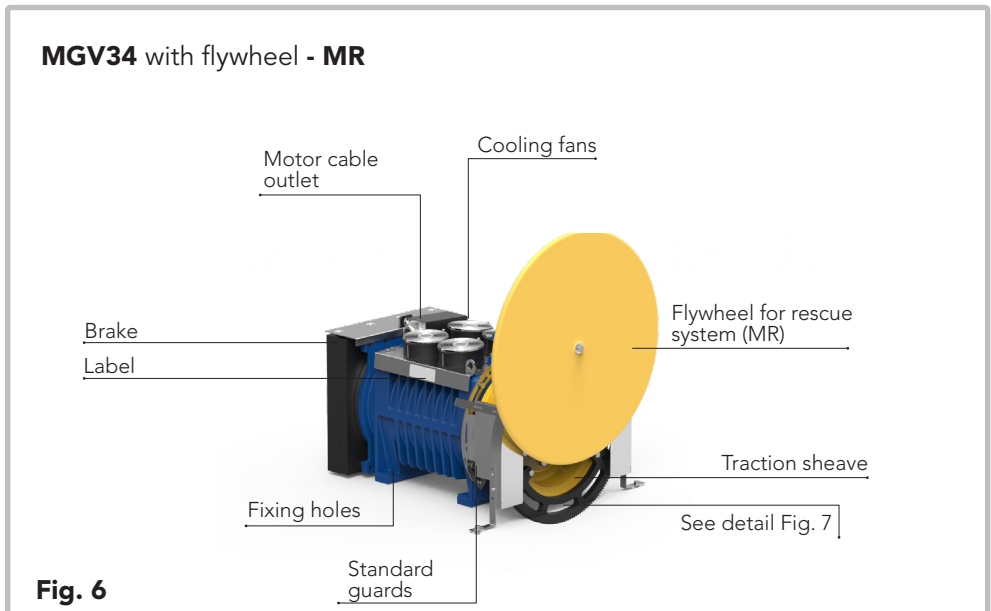




MGV34: MR Kit for transformation into machine room version Only for pulleys: 400 - 480 - 520 mm

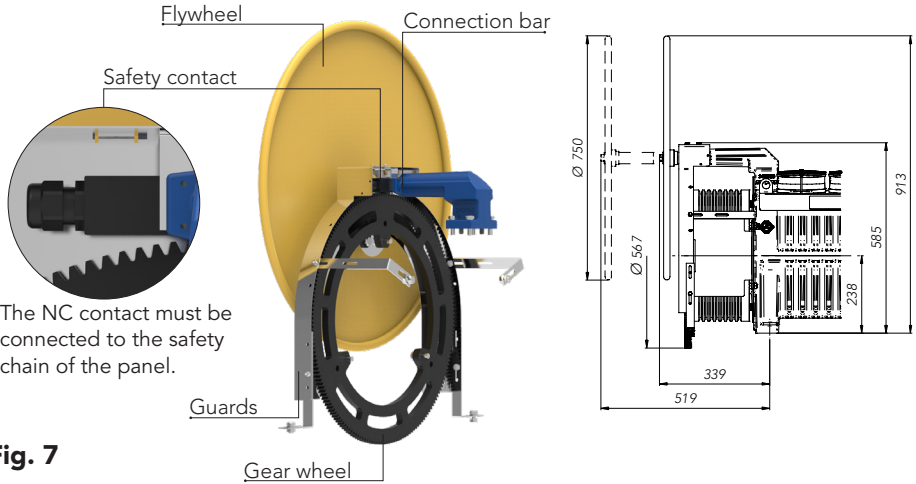

MGV34 without flywheel - MRL

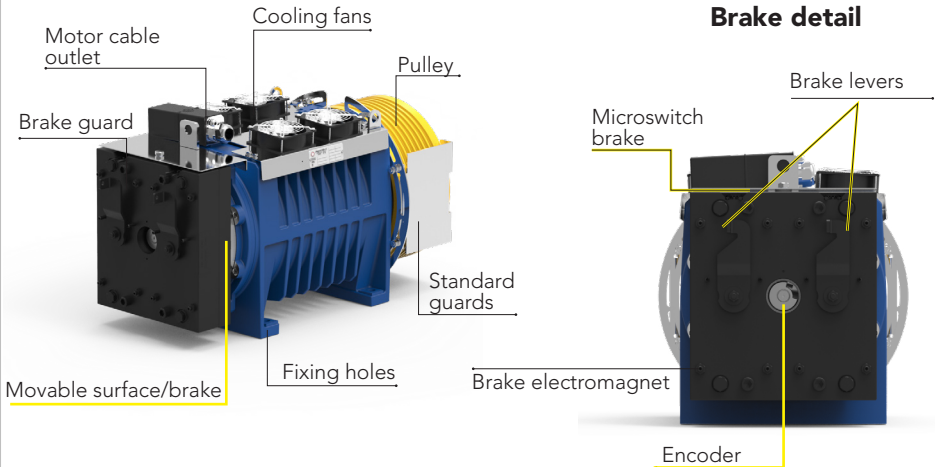

5.3 Brake

The gearless machine is supplied with a brake that conforms to the standards indicated in paragraph 2.5.

The brake system is pre-calibrated by the manufacturer and no further adjustment is required.



The brake system operates as follows:

- **Not powered** (electromagnet not powered): the brake disc is clamped by the movable surfaces (yellow arrows on Fig. 9). In this condition the system does not move.
- When the brake electromagnet is powered, it releases the brake disc (yellow arrows in Fig. 10); now the motor is released.

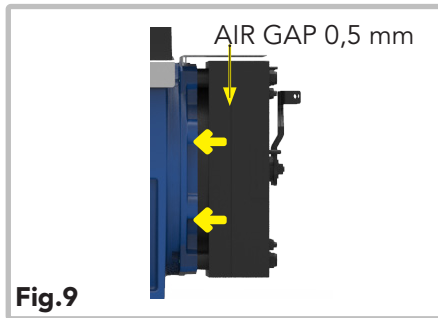


Fig.9
Brake system not powered

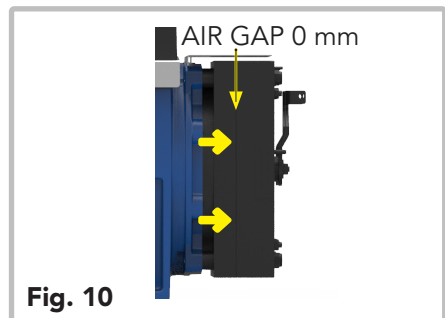


Fig. 10
Brake system powered



6. INSTALLATION

6.1 General installation information



The gearless machine must be installed in a building or in a closed travel compartment.

Do not use the gearless machine in an explosive atmosphere.

The room temperature must be between 0°C and +40°C.

Assembly and installation must be carried out with great care by qualified and trained personnel.

The manufacturer cannot be held responsible for damage caused by incorrect assembly or incorrect installation.

Before starting work, make sure that adequate lifting and handling equipment is available.

No welding work must be carried out on the unit.

The unit must not be used as a grounding point for welding operations. The bearings can be irreparably damaged.

All fixing points specified by the manufacturer must be used.

The air supply for cooling must not be prevented.

6.2 Installation surface


The installation surface must be uniform and level.

The levelling tolerance is 0.2 mm.

The installation surface must be rigid and robust enough to withstand the forces involved.

6.3 Installation procedure

The gearless machine can be lifted using the eyebolts for the insertion of the belts or lifting chains (see also the paragraph on storage and handling). Particular attention is needed to avoid that the gearless machine receives blows in correspondence of the brake disc; the brake levers and the electrical connections of the board are very delicate. Lifting example Fig. 11.

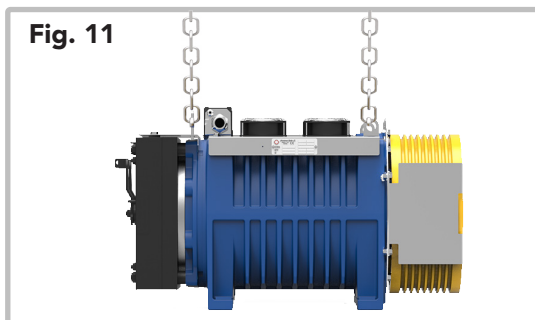

Place the unit on the installation surface and secure it.


- Fixing screws and nuts must be tightened to the prescribed torque.
- Use bolts with a minimum strength class of 8.8.
- Do not force or hit the fixings to position them; this could damage the bearings, rings, etc.
- Mount the safety devices.

The gearless machines are suitable for use with and without the machine room. The static load changes depending on the roping direction. (Figure 12):

Tab. 12

Bolt tightening torques (class 8.8)	
Thread	M20
Tightening torque (Nm)	410

Load direction

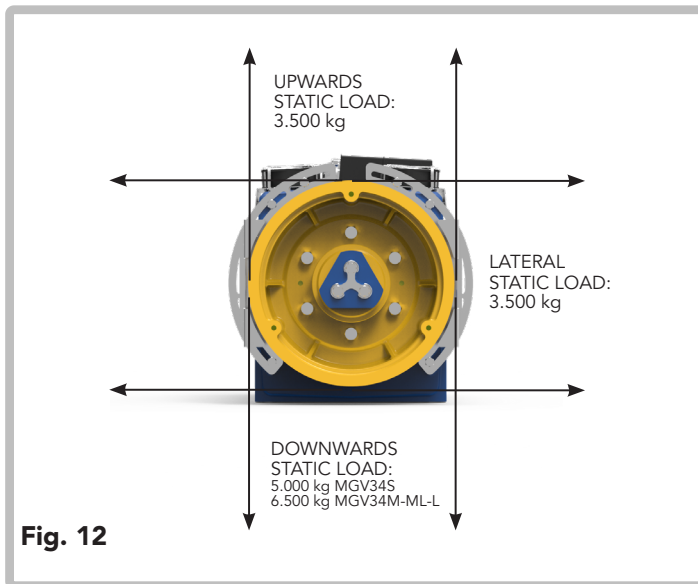




6.4 Electrical installation - Connections


The gearless machine is supplied with:

- power cable for the power supply of the motor [1 - 2 - 3, Ground, SC] (Fig. 13)
- cable for the power supply of the cooling fan (230 Vac).[F7-F8] and of the PTC guard [T5-T6] (Fig. 14).

Power cable

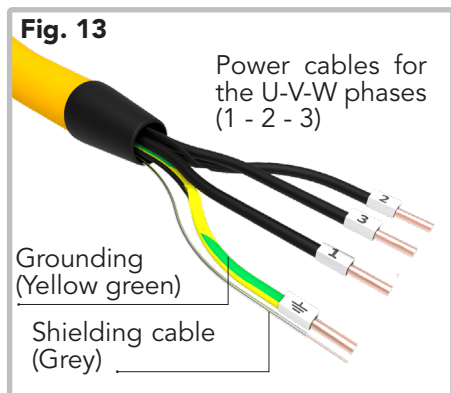


Cable PTC&Fans

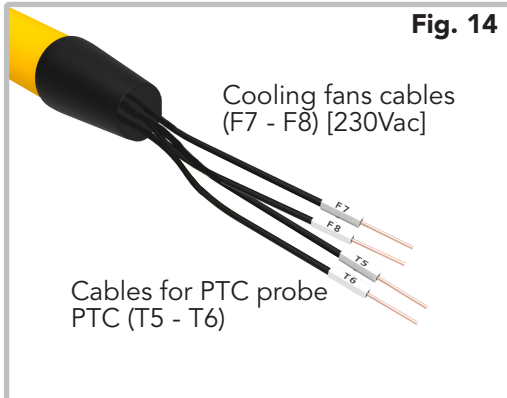

- The power cable must be routed separately from the other cables.
- The motor power cable is shielded and the shield must be grounded.
- The encoder cable must be routed away from the motor power cable to avoid electrical interference.
 - The brake system has a power cable and another cable for the microswitch contacts. (Figure no. 15). All electrical data are listed on the label of the brake system. The microswitch has two contacts: one open and one closed. (Fig. 16).
 - These contacts indicate the brake condition (see table 13).

Tab. 13

Brake disc closed	Condition contact	Brake disc free	Condition contact
BLACK BLUE COM. ——— N.O.	Disconnected	BLACK BLUE COM. ——— N.O.	Connected
BLACK GREY COM. ——— N.C.	Connected	BLACK GREY COM. ——— N.C.	Disconnected

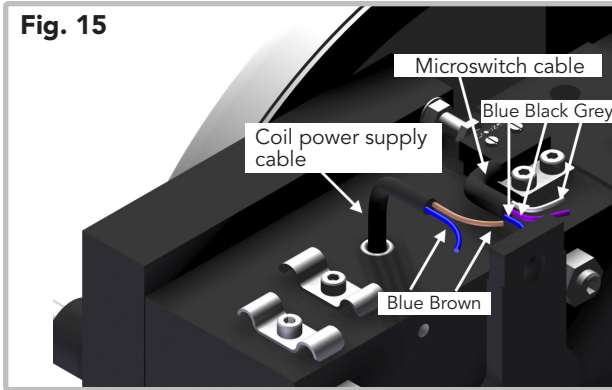

Power supply
Brake

Below an example for setting the parallel connection of the brake coil.

- **Standard mode:**

It is possible controlling only contactor 1 and leaving contactors 2 and 3 closed. (Fig. 16).


This protects the brake from dangerous overvoltage and noise when closing.

- **Emergency mode and inspection mode:**


The use of all contactors is recommended. Using only contactor no. 1 during opening and/or closing operations may cause an unacceptable delay when closing the brake.

Fig. 16 Typical application with brake coils in parallel configuration.

MGV34S

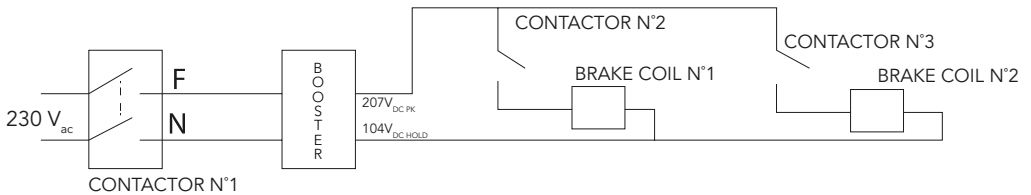

MGV34M-ML-L

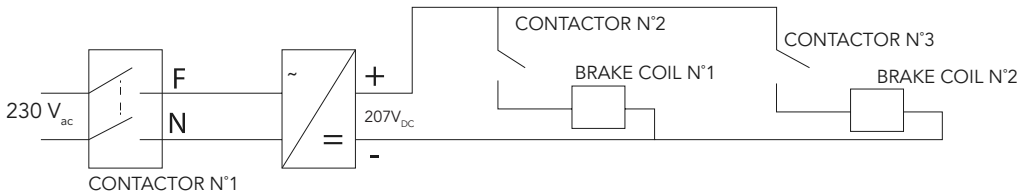



7. CONNECTION OF THE BRAKE FOR RESCUE SYSTEM

For installations with machine room, the cable and release lever are supplied as standard. The kit is shown in Fig. 17.

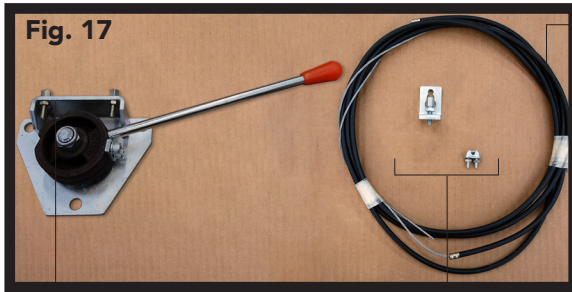


Fig. 17

Connection cable for brake levers for manual rescue system (3.5 m).

Lever for manual brake release.

Components for fixing the cable.

7.1 Connection of the cable to the brake levers

Insert the end of the cable into the lever holes. Tension and fix. Fold the end and secure with the rope clamp as shown in the figure. At the end, the result is as in the figure below. (Fig. 18).

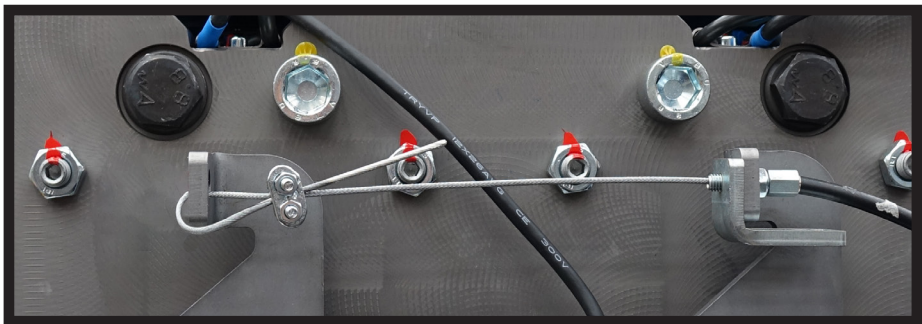


Fig. 18

7.2 Connection of the cable to the hand release lever

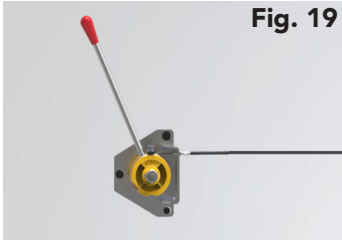


Fig. 19

Fix the lever to the wall with the bolts (not supplied). Connect the cable to the support as shown in Fig. 19.

Insert the other end of the cable into the screw hole. Tighten to stop. Fig. 20

Fig. 20


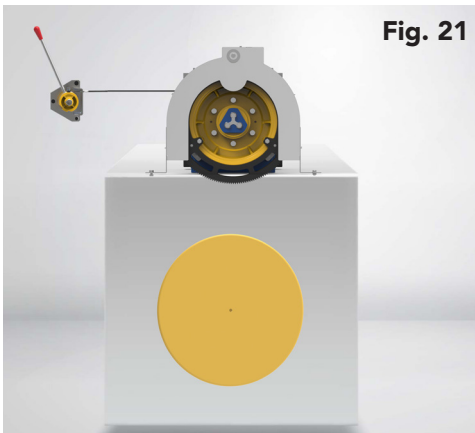


Fig. 21

Connection and installation must be carried out in such a way that the lever and the flywheel can be operated simultaneously. Fig. 21 - 22 - 23. This allows you to perform the rescue system operation correctly.

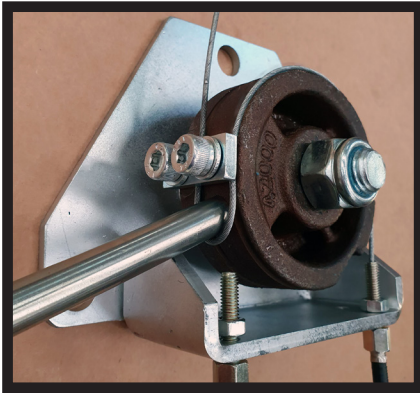


7.3 Rescue System

It must be performed by an independent electrical device capable of opening the brake and moving the gearless machine at a reduced speed. The characteristics of the synchronous motor can be exploited as it slows down the cab when the phases are short-circuited.

7.4 Manual rescue system

For installations with machine room

3. Lever for rescue system connected to the brake levers by cable (all included in the supply), see par. 7.1 - 7.2 for the connection.

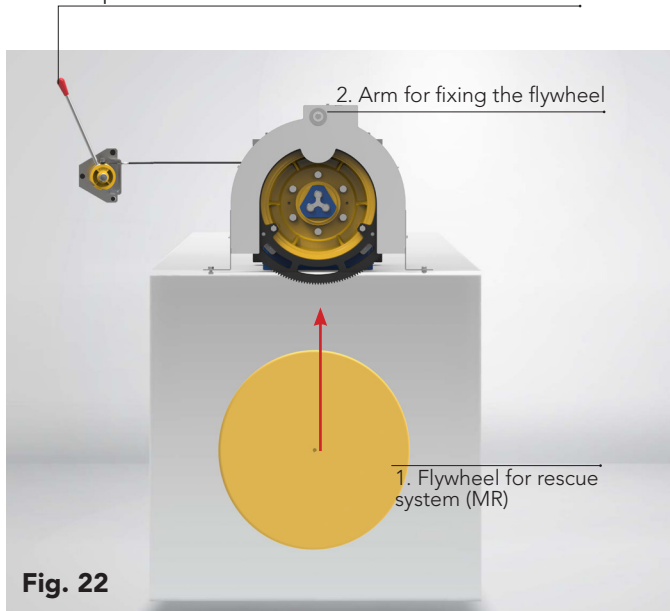


7.5 Procedure:

- Stop the system
- Calm any people inside the cab.
- Remove the flywheel (1) from the hook and install it in the arm (2).The NC contact (Fig. 7) of the flywheel switch opens the supply circuit and ensures safe manual operation. The machine now looks like in Fig. 23.

* (NC = Normally Closed)

3. Lever for rescue system connected to the brake levers by cable (all included in the supply), see par. for the connection.

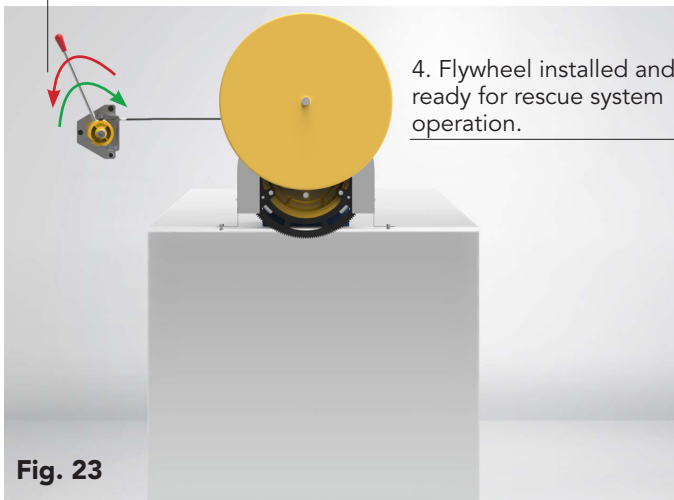

Grasp the flywheel firmly (4).

Operate lever (3) for manual brake release. Red arrow direction. Slowly turn the flywheel in the right direction to move the cab until the floor is reached.

Close the brake by releasing the lever: green arrow direction.

Open the floor door and the cab door to free the people inside.

Note: the company carrying out the maintenance of the lift system is responsible for these operations.



8. OPERATION

8.1 Connections

Connect the motor, brake, and monitoring devices.

The connection must be made by qualified personnel in accordance with the applicable safety regulations. Installation and operation requirements and current national and international standards must be met.

8.2 Additional components

If third party additional components or options are installed, please refer to the information in the respective separate documentation provided.

8.3 General operation information

When operating the MGV34 unit, be sure to check that the following situations do not occur:

- Excessive operating temperature.
- Excessive and unusual noise.

If any irregularity occurs during operation, turn off the power immediately. Identify the cause of the malfunction by using the table in Chap. 9, containing a list of possible problems, causes and suggested remedies.



If the cause of the malfunction cannot be identified, or if the unit has been repaired using the means available, you should contact one of our service centres for a specialised service

9. TROUBLESHOOTING, MAINTENANCE AND REPAIR

9.1 General information



Problems and malfunctions occurring during the warranty period, which are not precisely identified or which require work on the unit, must be referred to the manufacturer's Customer Service department.

Observe all safety rules.

Do not disassemble the motor on site.

The bearings are protected and do not require any additional lubrication under standard conditions of use.

Do not use high-pressure cleaners on the motor.

Montanari cannot guarantee or be held responsible for unauthorized operations on the unit, improper use, modifications made without its consent or the use of non-genuine spare parts.



When repairing problems or malfunctions, the unit must be put out of service in order to prevent unintentional start-up. Place a warning sign on the starting switch.

9.2 Traction/return sheave

Periodically, at least once a year, check the wear of the grooves in the traction sheave.

In case of slipping ropes or excessive wear, contact Montanari Giulio & C. for replacement instructions, always indicating the serial number.

9.3 Replacement of components

Instructions for the replacement of any component must be requested each time from the technical department specifying the serial number.

9.4 Problems, causes and solutions

Tab. 14

Diagnostic Table		
Problems	Causes	Solutions
The motor does not work	Motor phases are connected in the wrong way	Check the connection condition of the motor phases
	Wrong inverter configuration	Check the inverter settings
	Inverter defective	Replace the device
	Brake faulty	See below
	Motor mechanically locked	Contact Montanari Giulio & C.
	Motor connections loosened	Tighten the connections of the machine controller.
	Excessive temperature	See below
Brake system not working	Brake power supply wrong	Check the correct supply voltage of the brake coil.
	Brake system defective	Contact Montanari Giulio & C.
Excessive temperature	Cooling fan not working.	Replace the fan
	Cooling fan not correctly connected.	Check the voltage of the cooling fan. (230 V ac)
	PTC sensor defective	Contact Montanari Giulio & C.
	Wrong inverter settings	Check the inverter settings
Noise while travelling	Alignment of the motor with the deflection sheave incorrect.	Check and correct the alignment.
	Encoder defective	Replace encoder
	Wrong inverter settings	Check the inverter settings
	Bearing defective	Contact Montanari Giulio & C.



9.5 Maintenance and repair

9.5.1 General indications



The unit must only be used, maintained and repaired by authorized, properly trained and qualified personnel.

Compliance with the inspection and maintenance intervals is part of the conditions for the validity of the warranty.

9.5.2 Description of maintenance activities

Stop the unit and put it out of service. Place a warning sign on the start switch to prevent unintentional start.

Cleaning the unit

Remove dirt on the unit with a hard brush.

Remove corrosion signs.

The unit must not be cleaned with high pressure washing equipment.

Checking the tightening of bolts and nuts

Checking the tightening of all fastening bolts and nuts with a torque wrench. The screws and nuts must be tightened to the prescribed torque. The tightening torque is indicated in Table 15.

Tab. 15

Tightening torque (classe 8.8)	
Thread	M20
tightening torque (Nm)	410

10. SPARE PARTS

10.1 General information



By keeping the main spare parts and wear parts in stock, the unit can always be used.

10.2 How to order spare parts

The manufacturer guarantees only genuine spare parts and accessories supplied by him.

Other parts not supplied by the manufacturer have not been tested or approved. The use of these parts can therefore compromise certain characteristics of the gearless machine and expose it to active and passive safety risks.



The manufacturer will not assume any responsibility and will not recognize warranty for damage caused by spare parts and accessories not supplied by the manufacturer himself.

When ordering spare parts, always specify:

- Order no. of the machine to which they must be applied;
- Part code;
- Description;
- Quantity;

To order spare parts, write to **service@montanarigiulio.com**.

11. BRAKE CERTIFICATE

The brake has been designed in accordance with the norm: EN 81 - 20:2014, EN 81-50:2015, EN81-1:1998+A3:2009(D).

This device can be used as a brake to slow down the cab in combination with a speed governor if the cab speed upwards is excessive. The exam certificate is EU-BD 766 + EU-BD1014/1.



11.1 Exam certificate EU-BD 766

ZERTIFIKAT ◆ CERTIFICATE ◆ 認証証書 ◆ CERTIFICADO ◆ CERTIFIKAT ◆ CERTIFICAT	 Industrie Service
	EU TYPE-EXAMINATION CERTIFICATE According to Annex IV, Part A of 2014/33/EU Directive
	Certificate No.: EU-BD 766
	Certification Body of the Notified Body: TÜV SÜD Industrie Service GmbH Westendstr. 199 80686 Munich - Germany Identification No. 0036
	Certificate Holder: Chr. Mayr GmbH & Co. KG Eichenstr. 1 87665 Mauerstetten - Germany
	Manufacturer of the Test Sample: Chr. Mayr GmbH & Co. KG Eichenstr. 1 87665 Mauerstetten - Germany <small>(Manufacturer of Serial Production – see Enclosure)</small>
	Product: Braking device acting on the shaft of the traction sheave, as part of the protection device against overspeed for the car moving in upwards direction and braking element against unintended car movement
	Type: RSR/8010_ _ _ _ _ Size 200, 400, 600, 800, 1000, 1500
	Directive: 2014/33/EU
	Reference Standards: EN 81-20:2014 EN 81-50:2014 EN 81-1:1998+A3:2009
Test Report: EU-BD 766 of 2015-09-30	
Outcome: The safety component conforms to the essential health and safety requirements of the mentioned Directive as long as the requirements of the annex of this certificate are kept.	
Date of Issue: 2015-09-30	
Date of Validity: from 2016-04-20	
 Achim Janocha Certification Body "lifts and cranes"	
	
TUV®	

11.2 Exam certificate EU-BD 1014/1

ZERTIFIKAT ◆ CERTIFICATE ◆ 認証証書 ◆ CERTIFICADO ◆ CERTIFIKAT ◆ CERTIFICAT



Industrie Service

EU TYPE-EXAMINATION CERTIFICATE

According to Annex IV, Part A of 2014/33/EU Directive

Certificate No.: EU-BD 1014/1

Certification Body of the Notified Body: TÜV SÜD Industrie Service GmbH
Westendstr. 199
80686 Munich - Germany
Identification No. 0036

Certificate Holder: Chr. Mayr GmbH & Co. KG
Eichenstr. 1
87665 Mauerstetten - Germany

Manufacturer of the Test Sample: Chr. Mayr GmbH & Co. KG
Eichenstr. 1
87665 Mauerstetten - Germany
(Manufacturer of Serial Production – see Enclosure)

Product: Braking device acting on the shaft of the traction sheave, as part of the protection device against overspeed for the car moving in upwards direction and braking element against unintended car movement

Type: RTW Size 600, 800, 1000, 2000
Type 8012: _ _ _ _

Directive: 2014/33/EU

Reference Standards: EN 81-20:2014
EN 81-50:2014
EN 81-1:1998+A3:2009

Test Report: EU-BD 1014/1 of 2016-09-09

Outcome: The safety component conforms to the essential health and safety requirements of the mentioned Directive as long as the requirements of the annex of this certificate are kept.

Date of Issue: 2016-09-26



Achim Janocha
Certification Body "lifts and cranes"



TUV®



12. COMPLIANCE DECLARATION



MONTANARI GIULIO & C. S.r.l.

**COMPLIANCE DECLARATION
GEARLESS**

Manufacturer:

**Montanari Giulio & C. S.r.l.
Via Bulgaria n.39, 41122 Modena**

Models concerned by the current declaration:

MGX19 – MGX19 – MSG19M – MGS19L – MGX20M – MGX20L – MG200.3 – MGX21 – MGX25M
– MGX25M – MGX25ML – MGX25L – MGX34 – MGX34S – MGX34M – MGX34ML – MGX34L –
MGX34.4 – MGX34S.6 – MGX34.6 – MGX75 – MGX80 – MDD035 – MDD070 – MGX30.4 – MGX30.6
– MGX53 – MGX53S.

It is stated that the gearless in question comply with the Machines Directive 2006/42/CE as regards its relevant aspects and meets the following essential safety requirements as set out in Annex 1 of the directive:

- 1.3.2 risk of damage during the functioning;
- 1.5.1 electricity;
- 1.5.4 assembly errors;
- 1.5.8 noise;
- 1.5.9 vibration;
- 1.6 maintenance;
- 1.7.4 instructions.

The related technical documentation has been drafted in compliance with the Annex VII B.

Therefore, it complies with the following directives:

- 2014/33/UE, 2014/30/UE, 2014/35/UE

In addition, with the following regulations:

- UNI 10411-1; UNI 10411-3; UNI 10411-5; UNI EN 81-1:2010; UNI EN 81-20:2014

Note:

As regards, the fulfillment of the paragraph 9.7 of the UNI EN81-1:2010 and 5.5.7 UNI EN81-20:2014, it is recalled that Montanari provides safety device only upon explicit request by the customer.

Drafting:

Stefano Bertoni – Technical Director

Signature:

Massimo Montanari – Legal Representative

Montanari Giulio & C. srl
Via Bulgaria / 39 - 41122 MODENA - Italy
Tel. +39 059 45 36 11
Cod. Fisc. & P. IVA 0164790366

Modena, il 20/03/2020

Montanari Giulio & C. Srl - Montanari Group Headquarter
Via Bulgaria, 39 - 41122 - Modena - Italia
Tel: +39 059 453611 - Fax: +39 059 315890 - info@montanarigiulio.com
www.montanarigiulio.com



Montanari Group
GEARLESS&GEARBOX
TRACTION MACHINES

MONTANARI GROUP HEADQUARTER
Montanari Giulio & C. Srl

Via Bulgaria 39 - 41122 - Modena - Italia

Tel: +39 059 453611 - Fax: +39 059 315890 - info@montanarigiulio.com

www.montanarigiulio.com

